

HERO4 SILVER

Download the User Manual at
gopro.com/support

GoPro®
Be a HERO. 

When using your GoPro camera as part of your active lifestyle, always be aware of your surroundings to avoid injury to yourself and others, and to prevent damage to your camera.



Before using your GoPro camera, please read carefully all the safety precautions in the Important Product + Safety Information Guide included with your camera.



| **HDMI™**

To see the complete list of country certifications, refer to the Important Product + Safety Information Guide included with your camera.

/ Hello

Congratulations on your new HERO4 Silver camera. This Quick Start Guide will show you the basics of capturing life's most incredible moments with your GoPro.

To learn more, download the User Manual at gopro.com/support.

JOIN THE GOPRO MOVEMENT



[facebook.com/GoPro](https://www.facebook.com/GoPro)



[youtube.com/GoPro](https://www.youtube.com/GoPro)



twitter.com/GoPro




[instagram.com/GoPro](https://www.instagram.com/GoPro)

/ Getting Started

STEP 1


Remove the camera from the housing.



STEP 2


Remove the camera side door and insert a microSD card (sold separately).

(Requires a Class 10 or UHS-1 card. For a list of the recommended SD cards, visit gopro.com/support.)




STEP 3

Open the battery door and insert the battery.

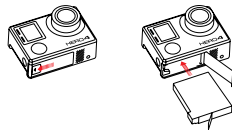


STEP 4

Charge the battery using the included USB cable.

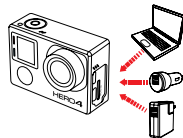

/ The Basics

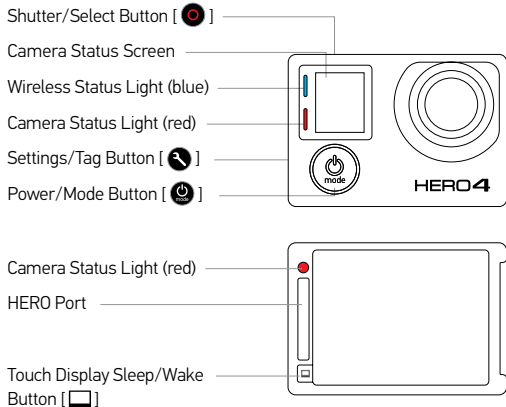


POWERING CAMERA ON AND OFF

To Power On:

Press the **Power/Mode** button [].

To Power Off:

Press and hold the **Power/Mode** button [] for two seconds.


/ Touch Display

Frame your shots, play back footage and quickly adjust settings on the camera's touch display.

TOUCH SCREEN GESTURES


Swipe Left

Display camera modes.




Swipe Up from Bottom Edge

Open the settings menu for the current mode.




Swipe Up/Down

Move through settings lists.




Tap

Select an item or turn a setting on/off.




Swipe Right

Display the last captured video or photo.








Double Tap

Change field of view (FOV) in preview mode.




/ Selecting Camera Modes


1. Swipe left on the touch display, and then tap the desired camera mode.

Camera Modes	Description
 Video	Video, Time Lapse Video, Video + Photo, Video Looping
 Photo	Single, Night, Continuous
 Multi-Shot	Burst, Time Lapse, Night Lapse
 Playback	Play back videos and photos
 Setup	Adjust general camera settings


2. If necessary, select a different capture mode:
 - a. Swipe up to open the settings menu.
 - b. Tap Mode, and then tap the desired capture mode.
 - c. Swipe down to close the settings menu.

/ Capturing Video and Photos


Select your camera mode, then press the **Shutter/Select** button [] to start/stop recording or take a photo.

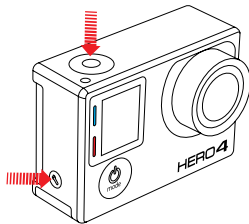

QUIKCAPTURE

When the camera is off and QuikCapture is enabled, you can turn the camera on and immediately begin capturing video or Time Lapse photos just by pressing the **Shutter/Select** [] button. Press once for video, press and hold for two seconds for Time Lapse photos. Press again to stop recording and power off the camera. You can turn QuikCapture on/off in Setup mode.

HIGHLIGHT TAG

Press the **Settings/Tag** button [] to tag key moments while recording or playing back video. HiLight Tags help you quickly find the highlights later for easy playback, editing and sharing.


/ Adjusting Camera Settings

1. On the touch display, swipe left to display the camera modes.
2. Tap the desired mode.
3. Swipe up to display the settings menu for that mode.
4. Swipe up or down to scroll through the options.

5. Tap to select your desired option.

6. When finished, swipe down to exit the settings menu.

To learn more about settings, download the User Manual at gopro.com/support.

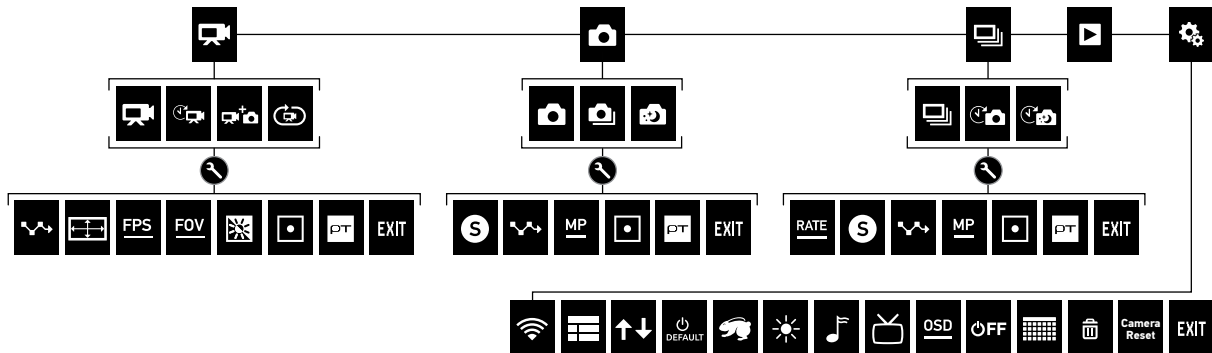


/ Mounting Your Camera

Mount your GoPro to helmets, gear and more with the included Curved + Flat Adhesive Mounts and hardware.


APPLYING + REMOVING ADHESIVE MOUNTS

Apply adhesive mounts to clean, smooth surfaces at room temperature only, at least 24 hours before use. To remove, heat with a hair dryer then peel off mount.

FLAT SURFACE MOUNTING




CURVED SURFACE MOUNTING

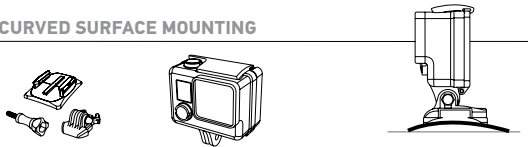


/ Mounting Your Camera


VERTICAL MOUNTING

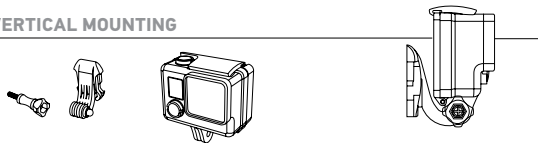

SIDE MOUNTING

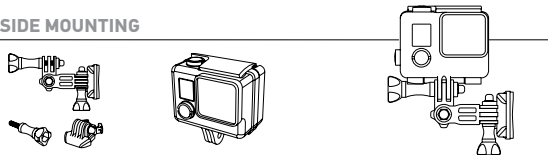

SURFBOARD MOUNTING*

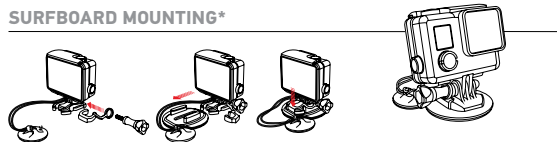


To learn more about mounting your camera, visit gopro.com/support.

**Surfboard mounts are included with HERO4 Silver/Surf only.*


/ Housing Backdoors

Your HERO4 Silver camera comes with three backdoors, each designed for different uses and environments.




STANDARD BACKDOOR

Provides waterproof protection to 131' (40m).
Use when shooting under water or in wet, damp or dirty conditions.



TOUCH BACKDOOR


Enables access to the camera's touch display.
Provides waterproof protection to 10' (3m).
(Touch functionality not available under water.)



SKELETON BACKDOOR


Not waterproof—use in dry, dirt-free environments only. Enables enhanced audio capture during low-speed activities.

/ Swapping Backdoors

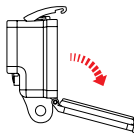


STEP 1

Open the housing so the backdoor hangs downward.

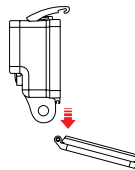


STEP 2

Pull down on the backdoor until it snaps free from the hinge.

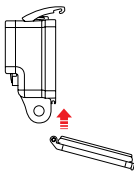

STEP 3

Align the new backdoor with the hinge.

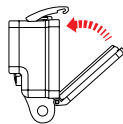

STEP 4

Push up on the backdoor until it clicks into place.

/ Playing Back Videos and Photos

There are several ways to play back your videos and view your photos.



CAMERA

Play back content on the camera's touch display.



SMARTPHONE + TABLET

Use the GoPro App to play back content on your smartphone or tablet. For more info, see *GoPro App*.



COMPUTER

Connect the camera to your computer with the included USB cable to transfer content for playback.

For help accessing your GoPro content, download the latest GoPro software at gopro.com/getstarted.



TV

Connect your camera to your TV with a micro HDMI, composite or combo cable (sold separately).

/ Sharing Videos and Photos

There are a few ways to share your videos and photos.



COMPUTER

Connect the camera to your computer with the included USB cable to transfer content for sharing.



SMARTPHONE + TABLET

Use the GoPro App to share videos and photos by text, email or on your social networks. For more info, see *GoPro App*.

/ GoPro App

CONTROL. VIEW. SHARE.

The GoPro App lets you control your camera remotely using a smartphone or tablet. See what your camera sees with live preview. View photos and play back videos, then share your favorites via email, text, Facebook, Twitter and more.

TO CONNECT TO THE GOPRO APP

1. Download the GoPro App and open it on your smartphone or tablet.
2. When the app stops searching, tap Connect Your Camera.
3. Follow the app's on-screen instructions to connect your camera. The default password is *goprohero*.

To learn more about the GoPro App, visit gopro.com/getstarted.



/ Help and Resources

Visit gopro.com/getstarted to learn more:

UPDATE YOUR CAMERA

Get the latest features and best performance.

CREATE A GOPRO ACCOUNT

Enter for a chance to win Video of the Day, Photo of the Day and more.

DOWNLOAD THE USER MANUAL

Find detailed info on settings, modes and more.

GET THE GOPRO APP + GOPRO STUDIO

Control your camera remotely. View and share content. Create videos.

WATCH A TUTORIAL VIDEO

Learn tips + tricks from the pros.

CONTACT CUSTOMER SUPPORT

Get help and find answers to frequently asked questions.